

Septage Hauling Disposal

Kelly Thompson
Certification & Licensing Coordinator
608-266-8948
Kelly.Thompson@wisconsin.gov




WWTP Plant Disposal

	# Grade T
NER	35
NOR	7
SCR	25
SER	33
WCR	16
Out of State	18


- ~350 Grade L businesses (land application, some TP disposal)
- ~140 Grade T (dispose at TP only)

Septage Tank Waste

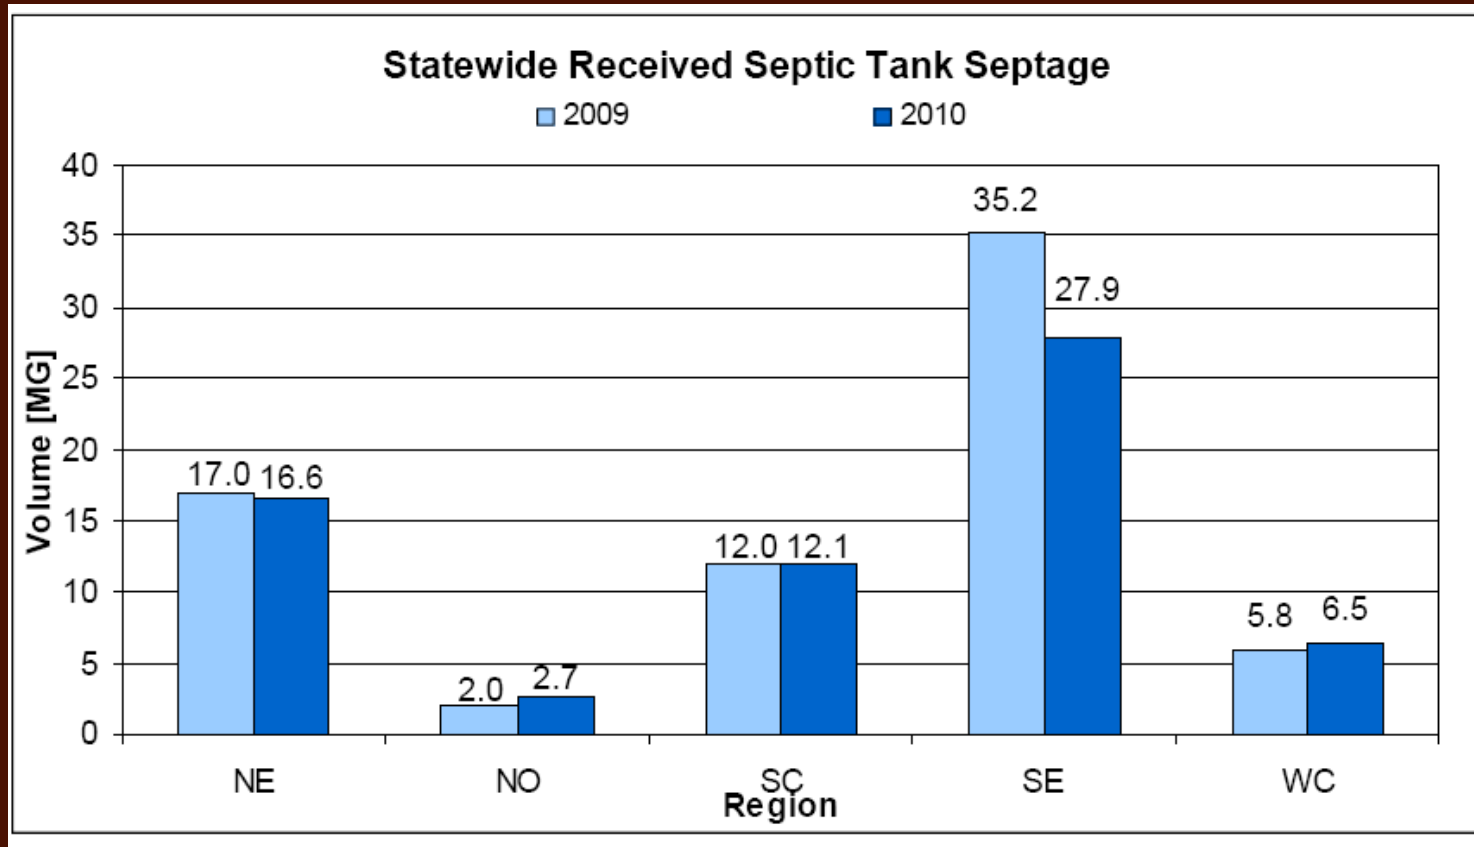

Courtesy of Amy Schmidt

Holding Tank Waste

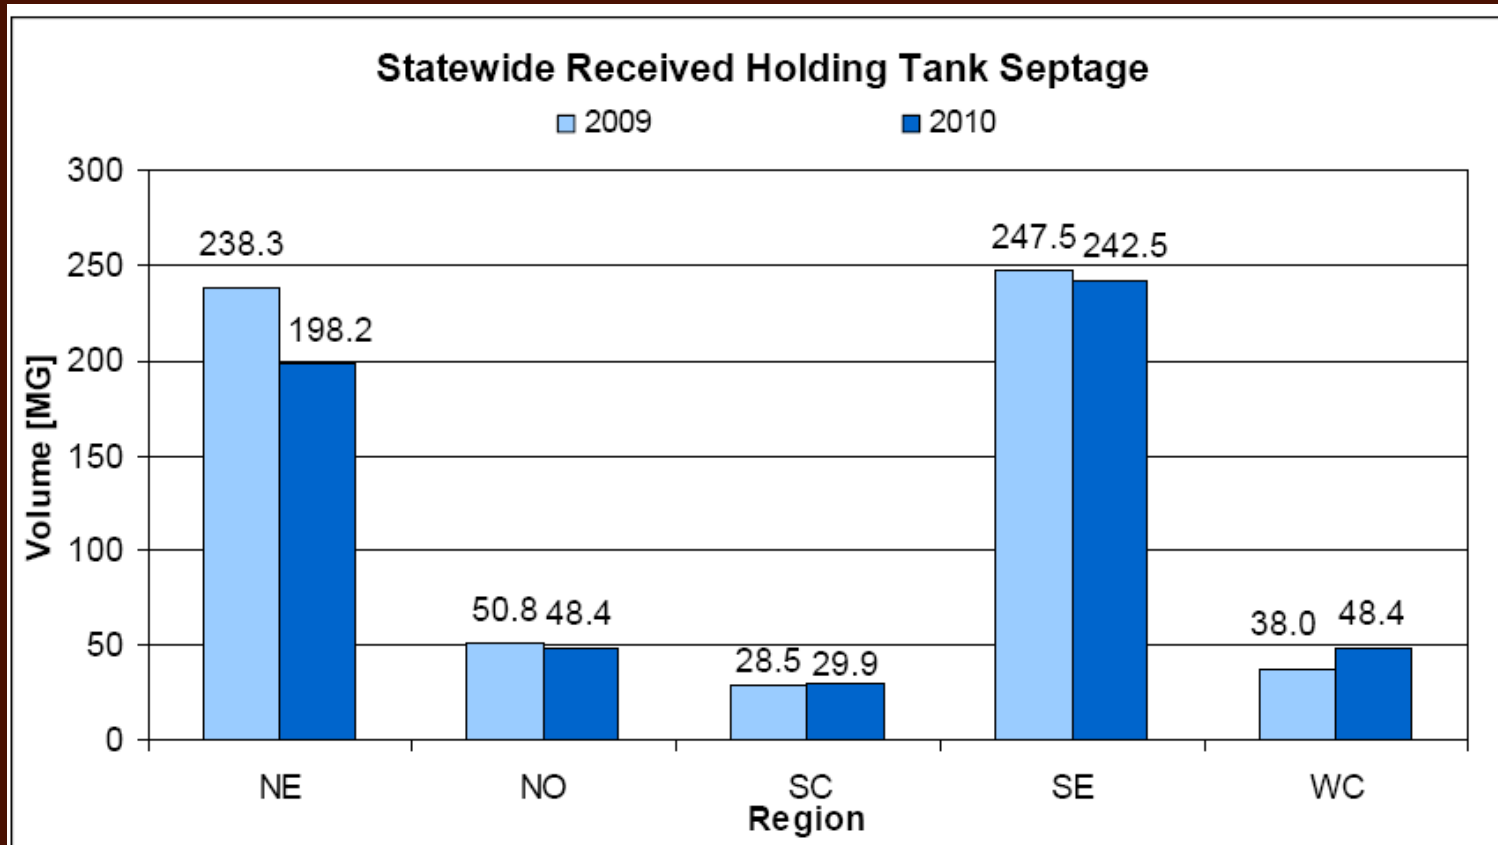

Courtesy of Amy Schmidt

Advantages vs. Disadvantages

- Costs
 - Good public relations
 - Environmental Protection
 - Less paperwork!
(pertaining to DNR/EPA Septage Audits)
- Costs
 - Coordination with the plant
 - Location of the nearest plant

Advantages vs. Disadvantages

- Revenue for the plants
- Good public relations
- Environmental Protection
- Late pay/no pay
- Improper loads
- Additional labor/equipment needs

Solutions to the No Pay Hauler (uncontrolled collection systems)

Cameras

Card readers

Flow meters

Rejection

Disposal of septage at a POTW

April 16 – November 14

POTW Conditions

- Apply for permission to discharge
- If approved, the POTW can and do set conditions that prevent plant maintenance and equipment issues and in accordance with their Sewer Use Ordinance.

Disposal of septage at a POTW

November 15 – April 15

POTW winter conditions:

- Apply by **September 1** for permission to dispose during winter months.
- If approved, the POTW can and do set conditions that prevent plant maintenance and equipment issues and in accordance with their Sewer Use Ordinance.

Improper Loads

- Strength of septage
- Impact of septage

TYPICAL WASTEWATER / SEPTIC TANK COMPARISON

	Residential Wastewater	Septic Tank	
BOD	250 mg/l	6,500 mg/l	26x
TSS	250 mg/l	13,000 mg/l	52x
P	8 mg/l	210 mg/l	25x
NH3	20 mg/l	97 mg/l	5x

IMPACT OF SEPTAGE BOD AND TSS

2,000 gallons of septic tank waste is equivalent to the wastewater generated by 600 people in one day

IMPACT OF SEPTAGE BOD AND TSS

Imagine the impact of
wastewater from 600 people in
10 minutes, on a system
designed to serve 1,000 people
vs. a system designed for
50,000 people


SHOCK LOADING

- High volume discharges can overwhelm tanks and equipment
- High organic strength waste can overwhelm biological processes
- Some types of systems handle sudden changes and shock loading better than others

Treatment Plant Processes - BOD

- Biochemical Oxygen Demand.

Measures the amount of oxygen (O) used biologically (by bacteria), in other words the organic strength of the wastewater (measured in milligrams per liter (mg/L)).

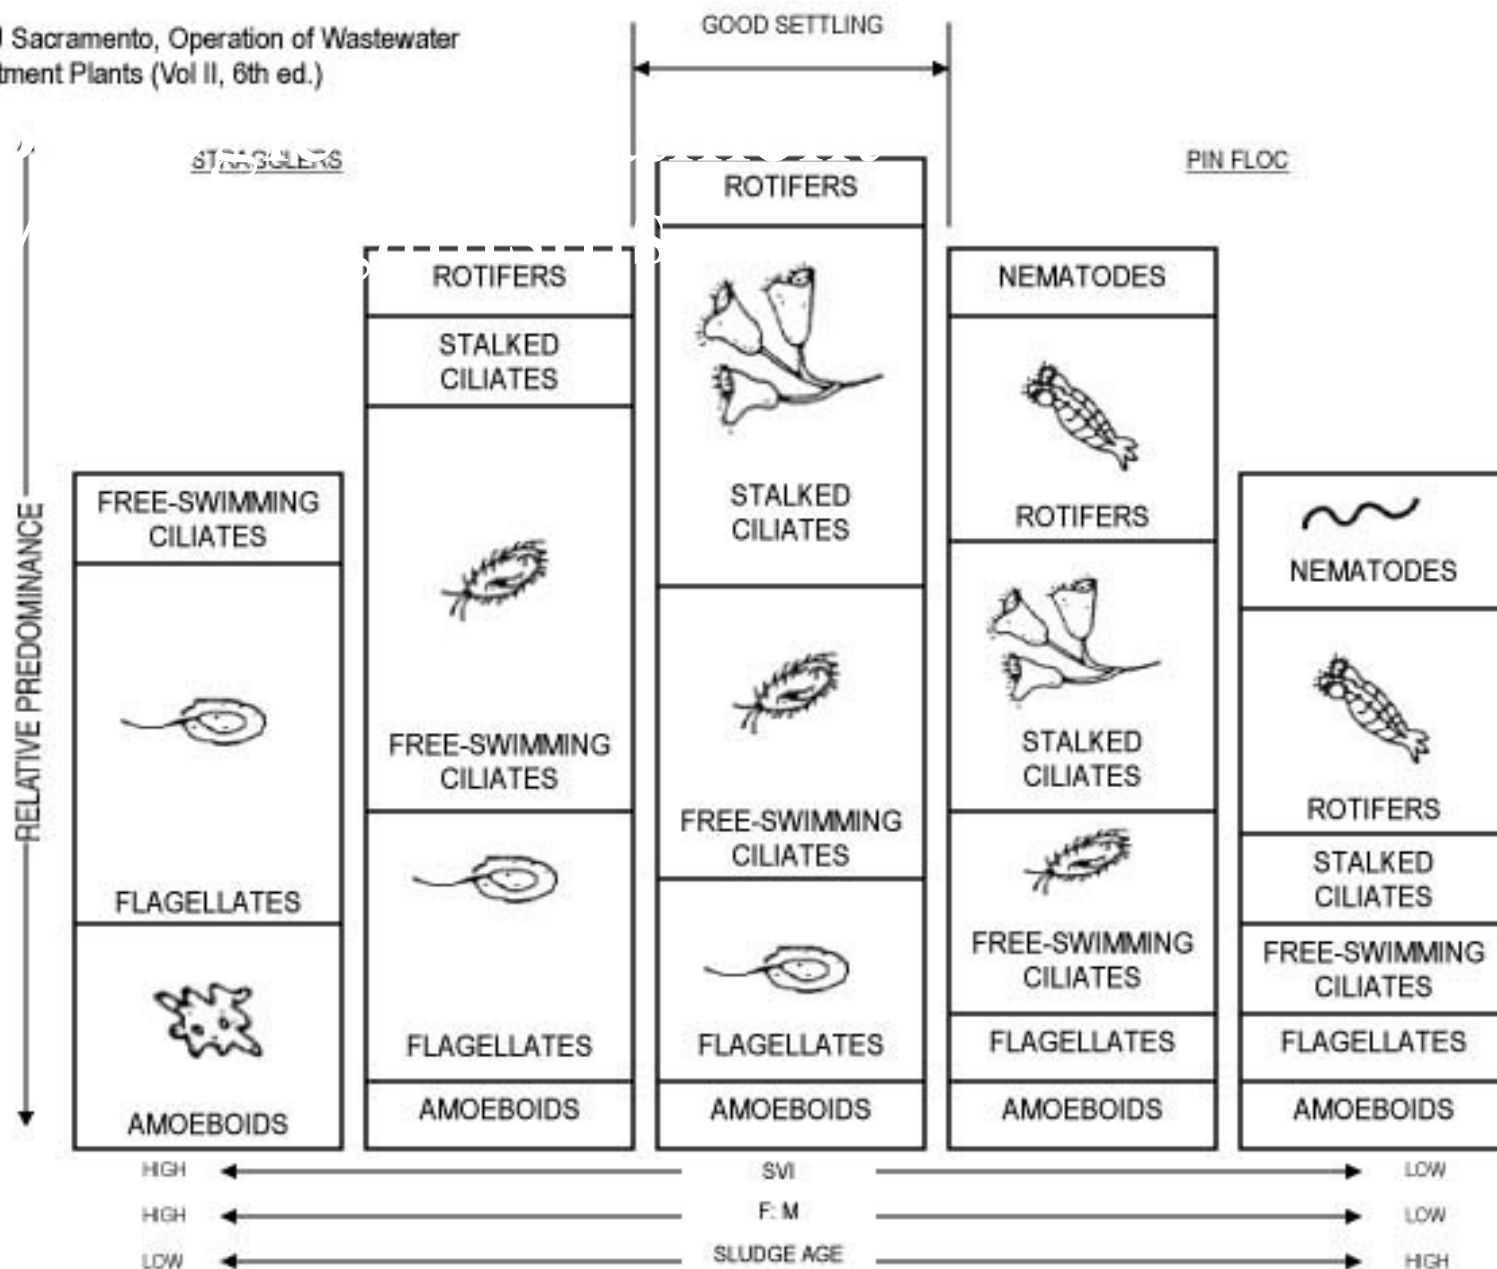

Treatment Plant Processes - TSS

- Total Suspended Solids.

Measures the amount of solids in wastewater. Too many solids cause process flow issues like pump clogging and sewer blockages.

Treatment Plant Processes - P

- Total Phosphorus

Outflow with high amounts of phosphorus supports a toxic environment for algae to grow – in abundance.

Treatment Plant Processes - NH_3

- Ammonia

Outflow with high amounts of ammonia has lead to the death of thousands of fish and is capable of destroying water ecology systems.



TYPICAL WASTEWATER / SEPTIC TANK COMPARISON

	Residential Wastewater	Septic Tank	
BOD	250 mg/l	6,500 mg/l	26x
TSS	250 mg/l	13,000 mg/l	52x
P	8 mg/l	210 mg/l	25x
NH3	20 mg/l	97 mg/l	5x

Ch. NR113 Wis. Admin. Code

NR113 are authorized to haul septage waste, but not hazardous or industrial waste. Know your customers to be sure you're not transporting toxic waste that can disrupt treatment plants and destroy cropland.



In Conclusion

TRUCK
LB 9860
WISCONSIN

Special Thanks

- Amy Schmidt, Jack Saltes P.E., Andy Kempen, Dave Carper P.E. – DNR
- Casey Schaefer - Potosi WWTP
- Dennis Moen – Platteville WWTP
- Rich Boden – Plover WWTP
- Connie Wilson – Burlington WWTP